


Epoxy Desk Written Instructions

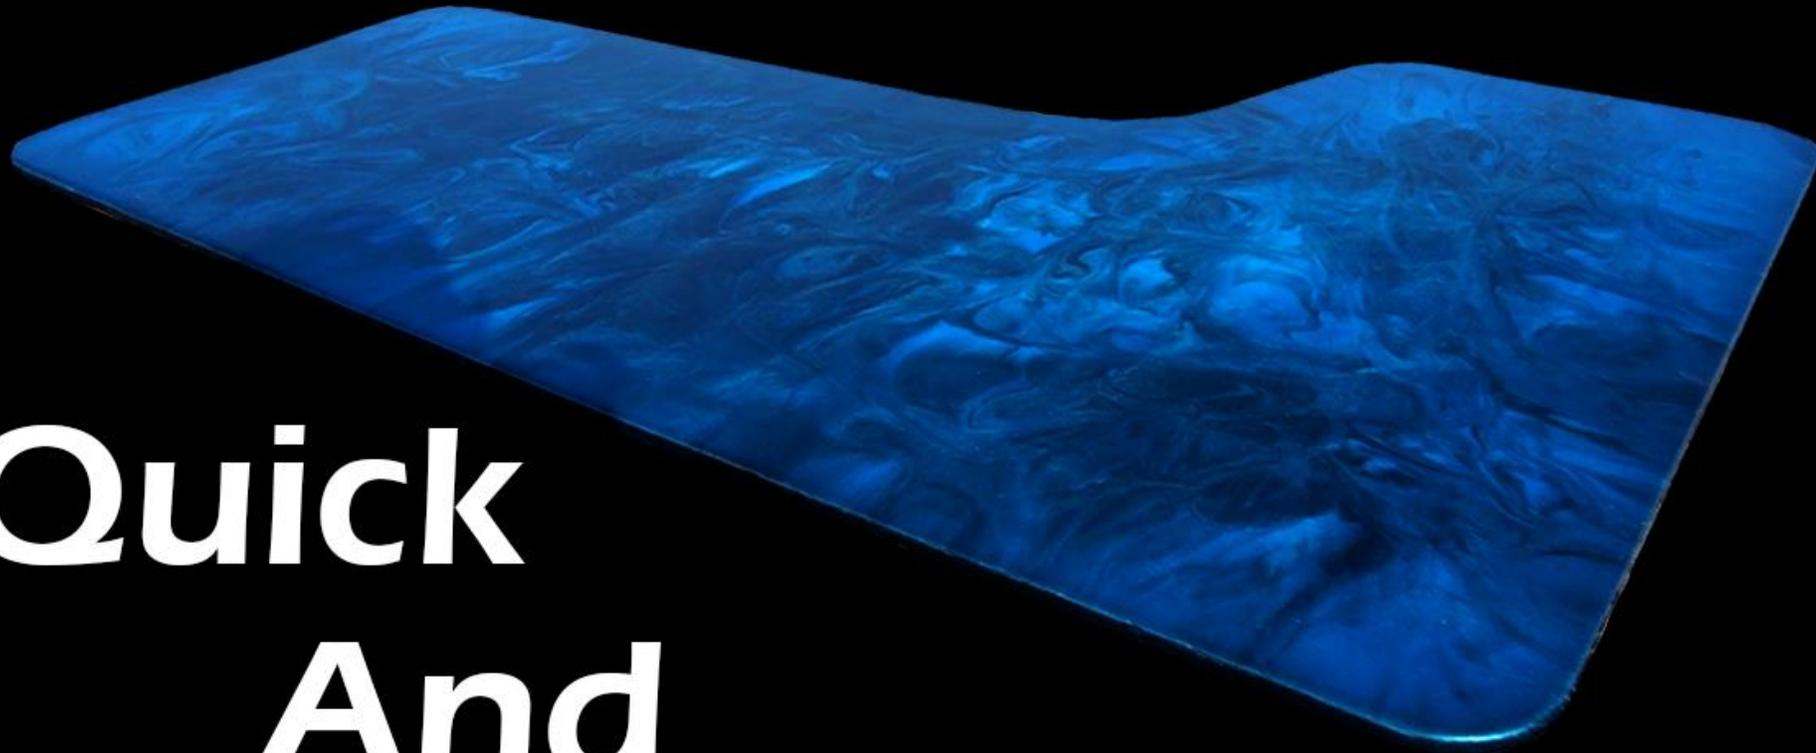

**Quick
And
Easy**

Materials You Need



**Card-
board**



**Cheap
Desk**



**Orbital
Sander**



Denatured
Alcohol

Primer

Foam
Roller



Mixing
Container



Level



Tabletop
Epoxy



Metallic
Pigments




Blue
Painters
Tape

Spoon



Torch

Use a sander to remove water damage

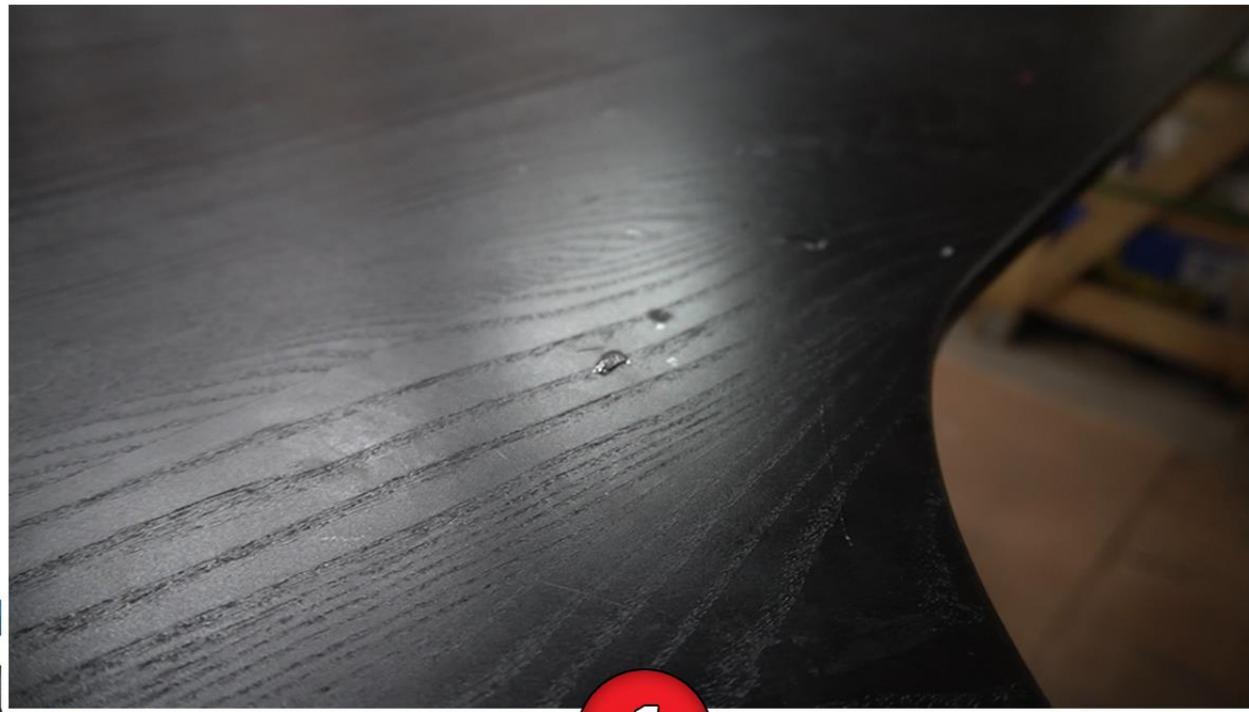

And to create a good bond for the primer



1





**Sand the edges
down to a
rounder corner**

2

**This can be
done easier
with a router**



Use denatured alcohol to clean off the debris



This can also be done with isopropyl alcohol (70%)

**Premix the
pigmented
Part-A of
your
primer**


4



**Mix 4
Parts-A
to 1
Part-B**



5

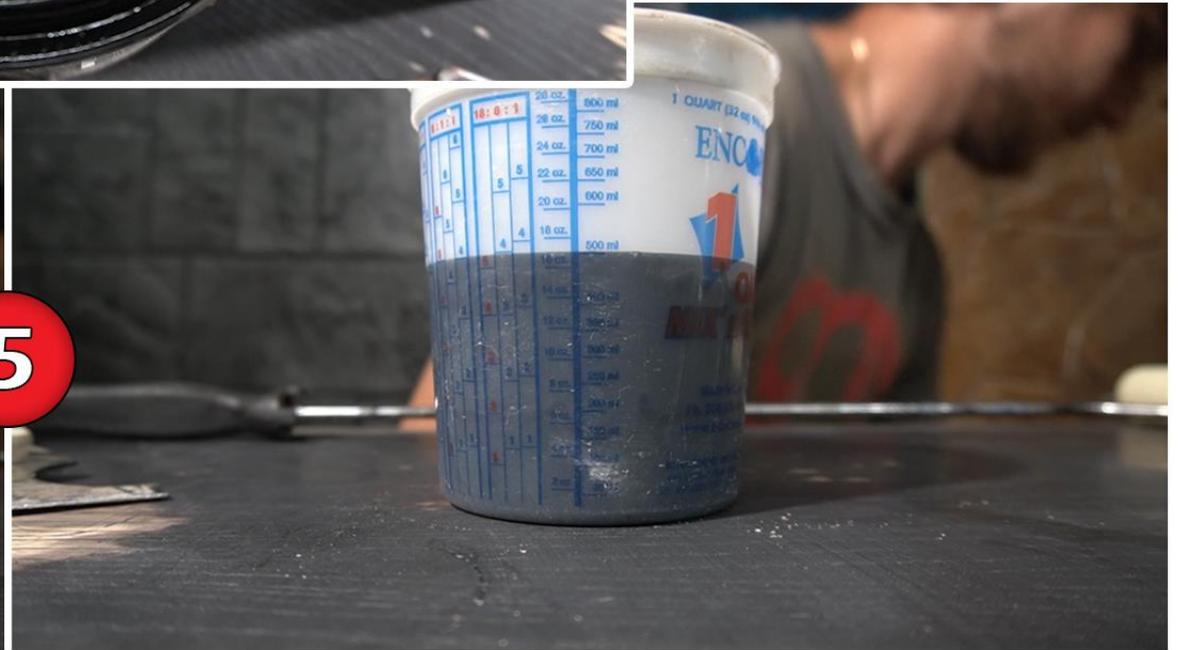

**Roll the
primer
onto the
tabletop**



Pro Tip
Use light colored primers for light colored epoxy, and vice-versa


6





**Once the
primer
cures, sand
it with 220
grit paper**

**Then clean off
the debris
with
denatured /
isopropyl
alcohol**

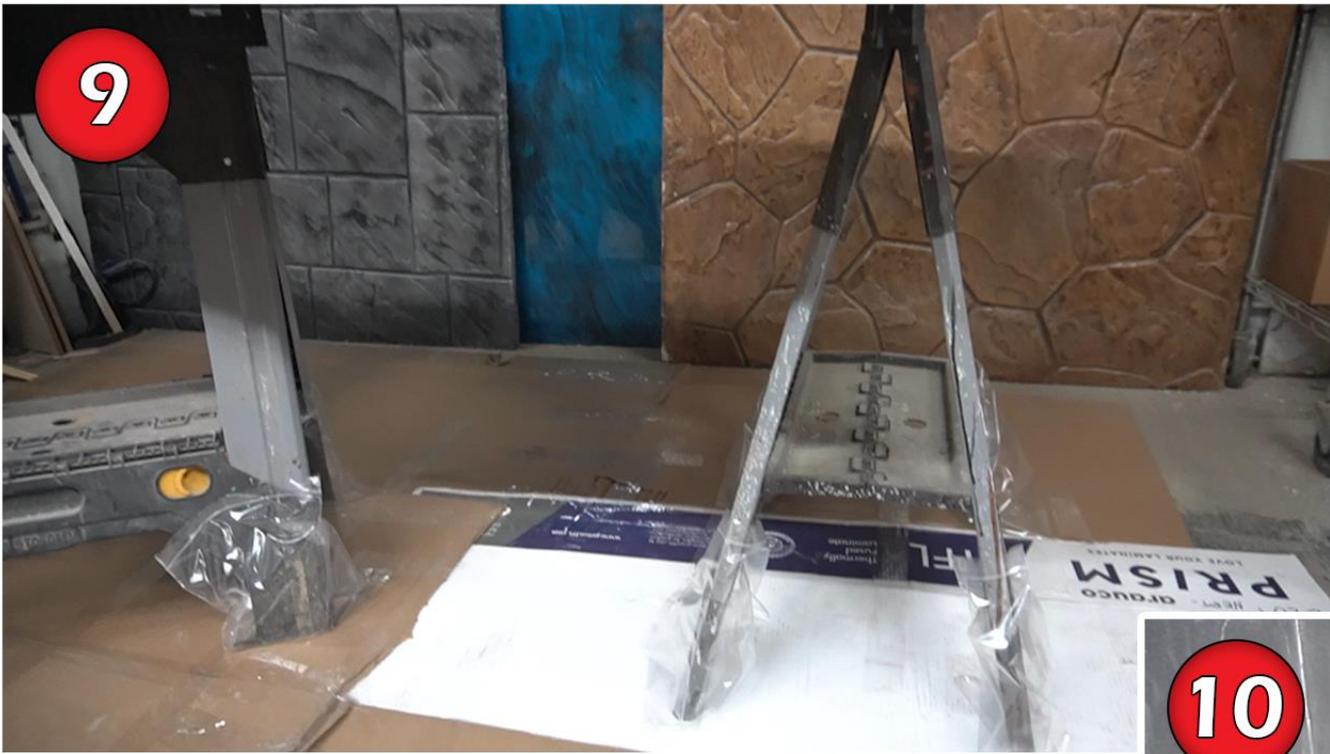


Make sure the floor is protected from epoxy drips with cardboard

Always level the surface you will coat with epoxy



**Measure
the epoxy
at 2 Parts-
A and 1
Part-1**

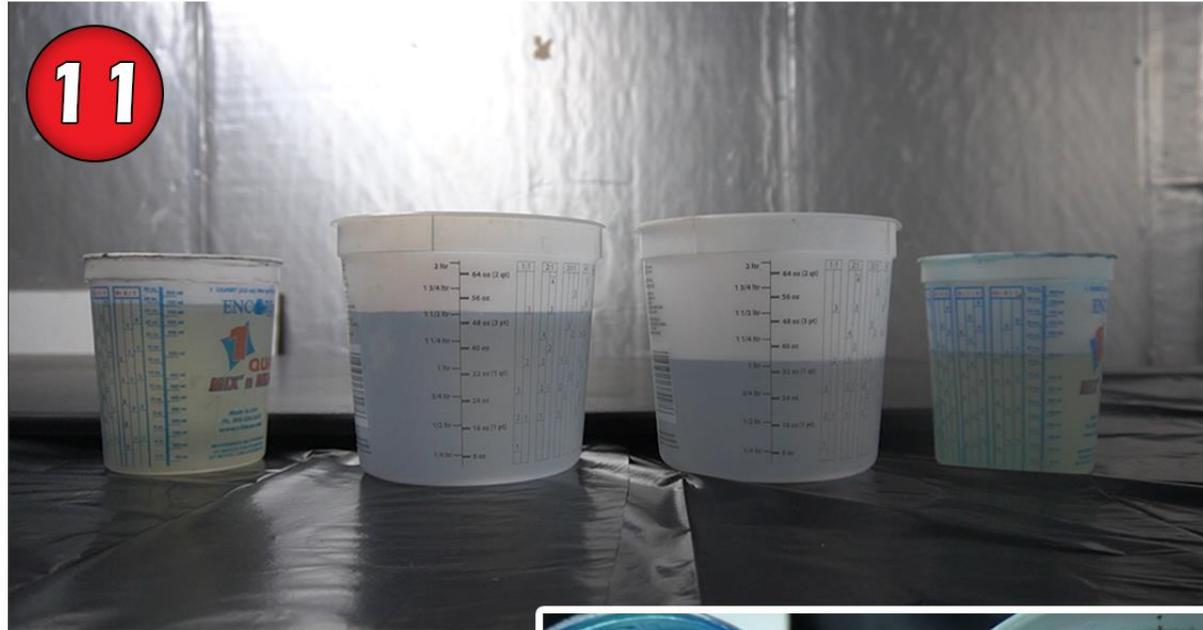


**Mix the
metallic
pigments
into the Part-
B because it
is more liquid**





Optional
Create a dam
around the corners
with tape

Use blue
painters tape
for better
release

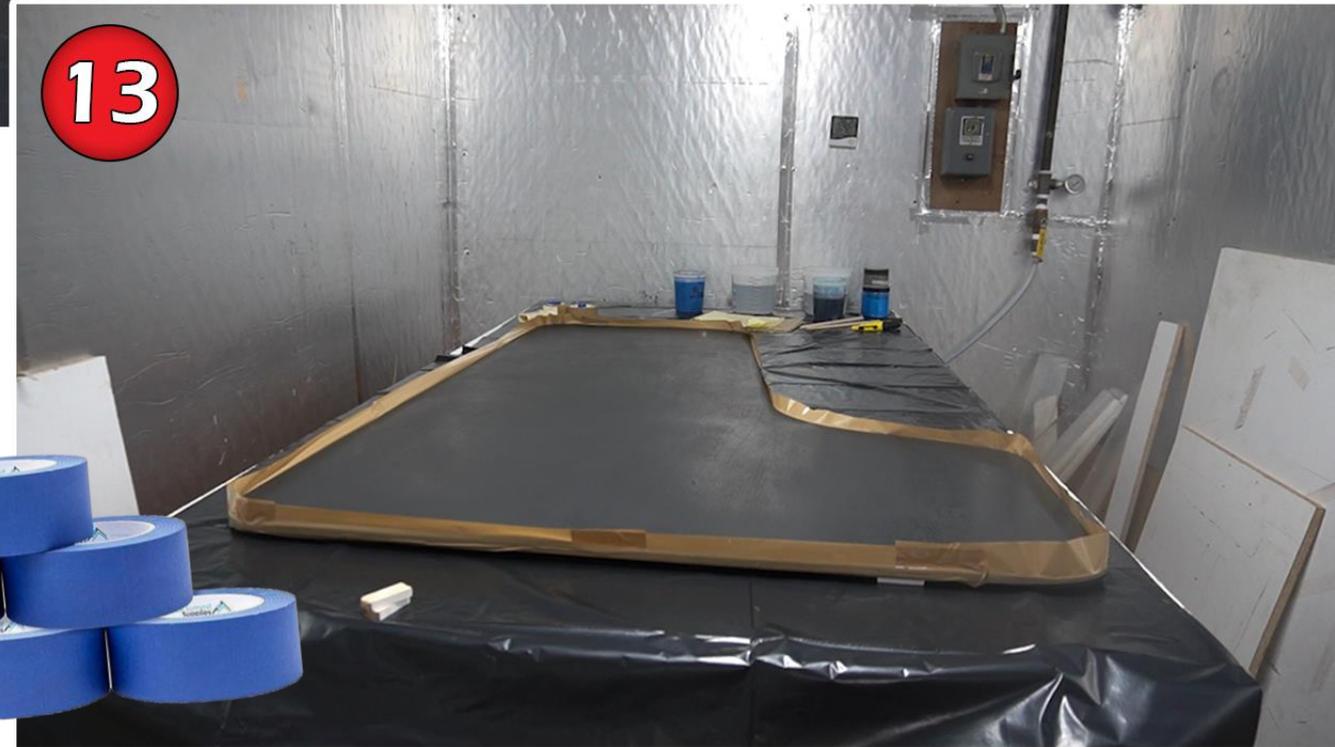

Mix the Part-A into the Part-B




Pro Tip
Only use tabletop epoxy on tables because it is food safe!!



14




**Pour the
epoxy onto
the table**

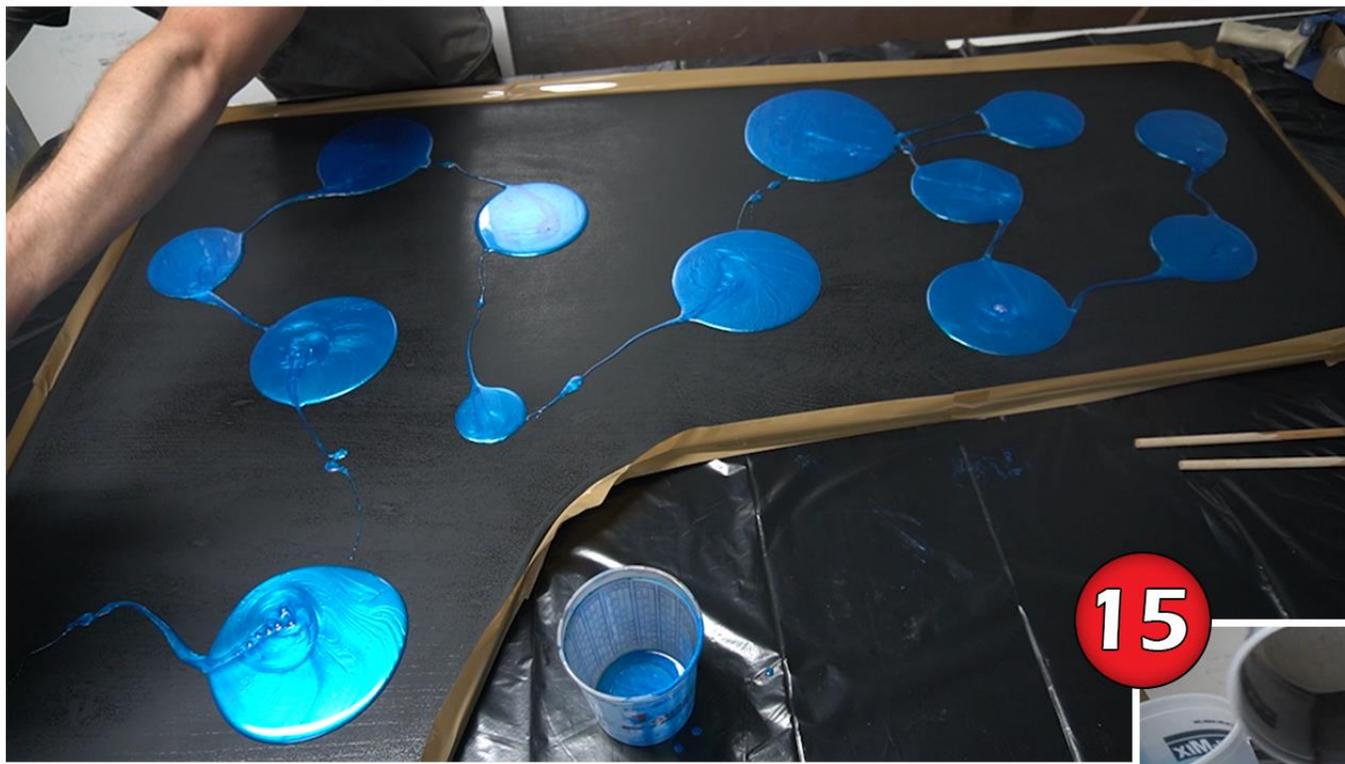

15

**The colors I used
were royal blue
and onyx
metallics**

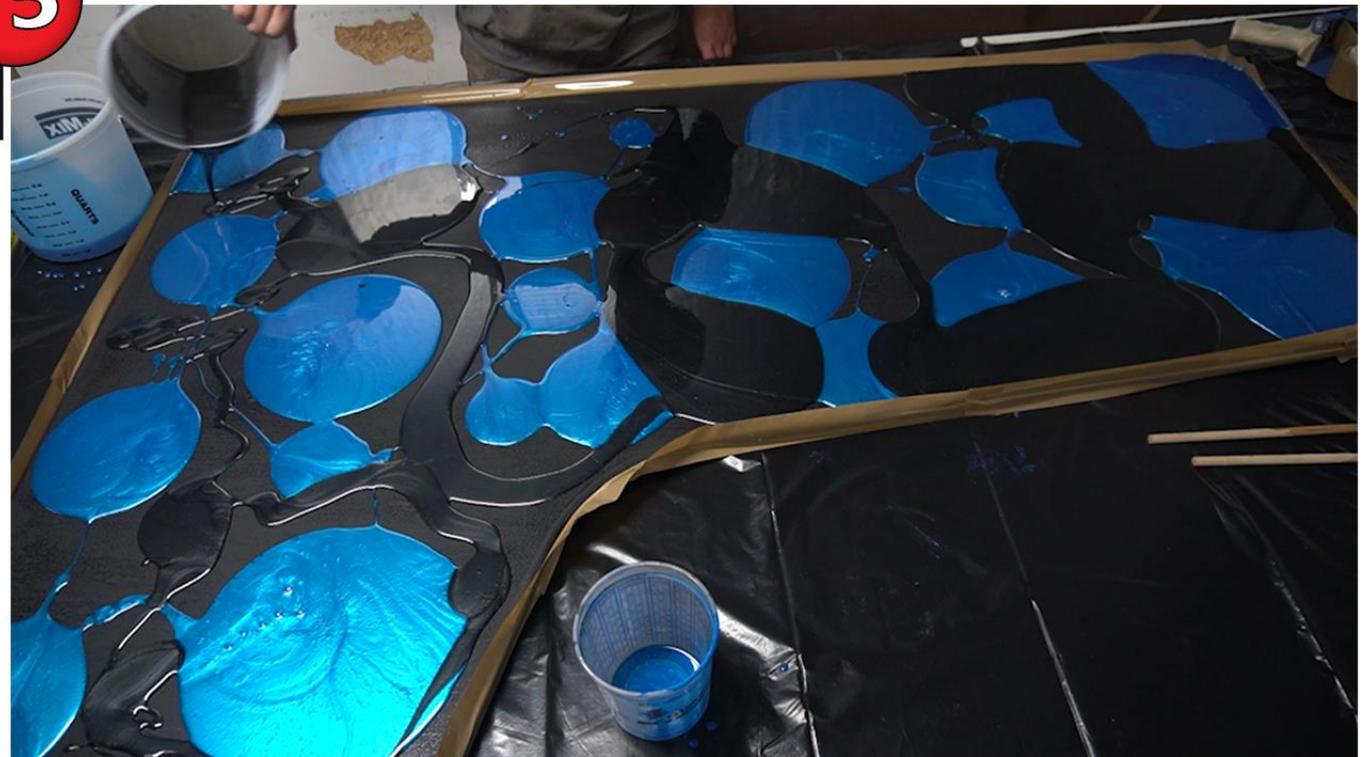


Use a plastic spoon to mix and texture the epoxy



Don't make the same motion with your hand or the texture will look repetitive

16



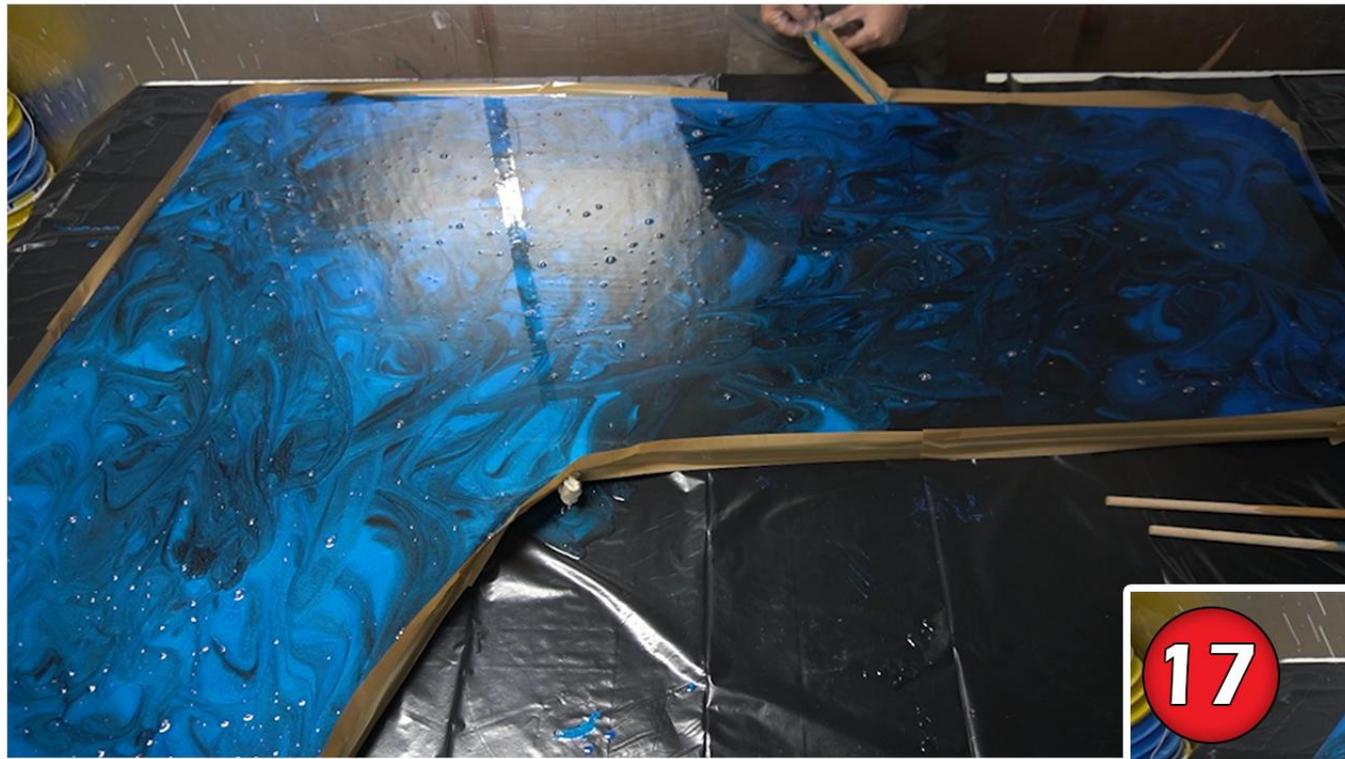


**Remove the tape
to let the edges
get covered with
epoxy**

**The spread of the
epoxy will depend on
how soon you remove
the tape. I waited
about 15 minutes**



**Use a
torch to
pop the
bubbles**

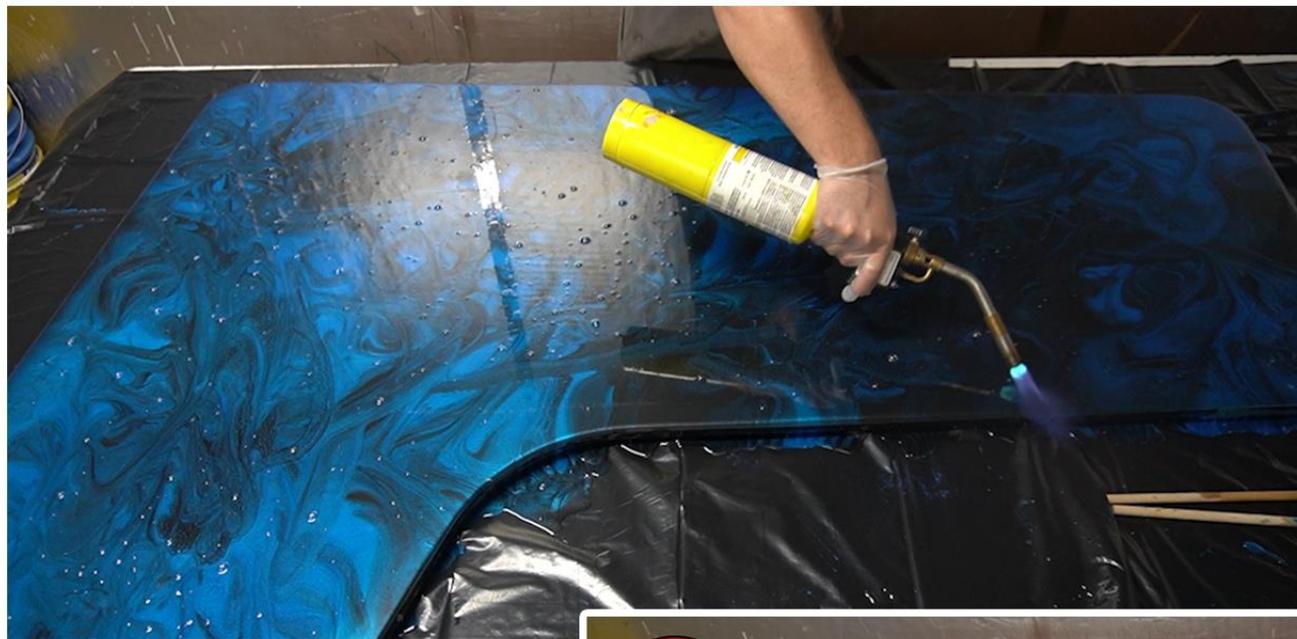


**You can
also use
a heat
gun**



18

Once the epoxy cures(12-24 hours), you will be left with epoxy drips underneath

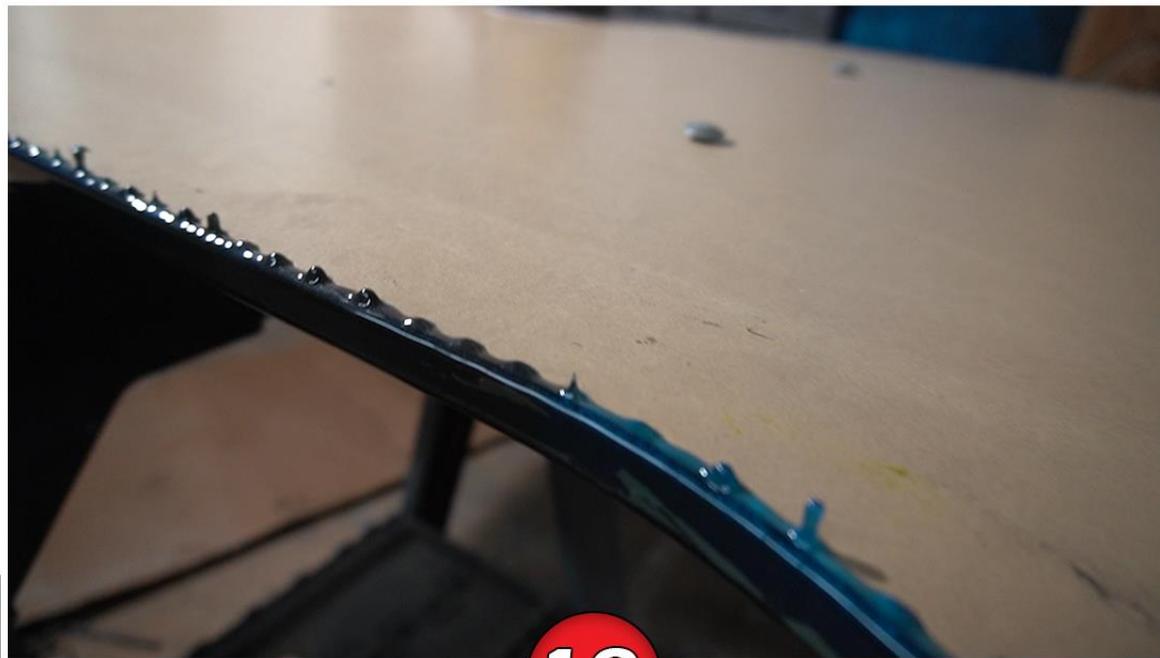

They are easily removed with an orbital sander



19



**All done.
Enjoy!!**



You can watch the full video here

Quick

And

Easy

