

How to Install Thin Bricks

What You WII Need





Type S Mortar

MORTAR

ΜΙΧ

TYPE S



Large Brush



Grout Bag





OR

(Indoors)

<u>100%</u>

Silicone


BLACK

OR

(Indoors & Outdoors)

Thin Set Mortar


(Indoors & Outdoors)

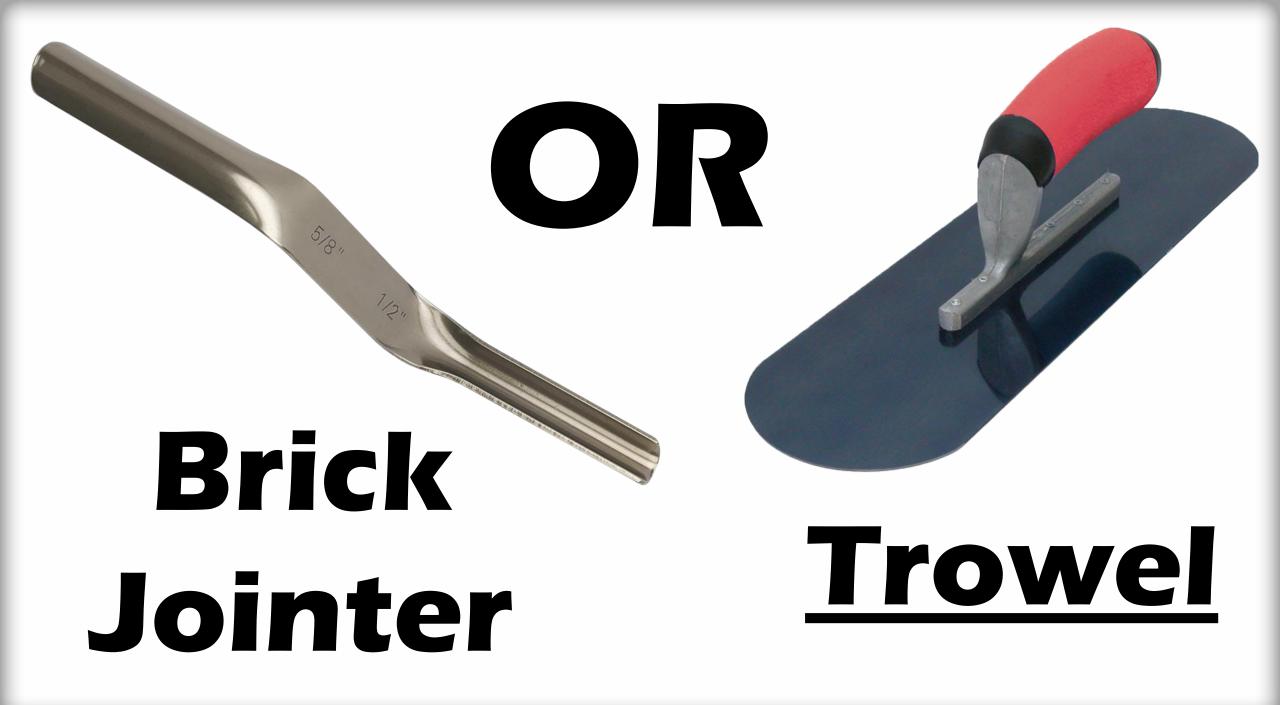



You start on the floor in the very corner

Warning The floor must be level!!!!

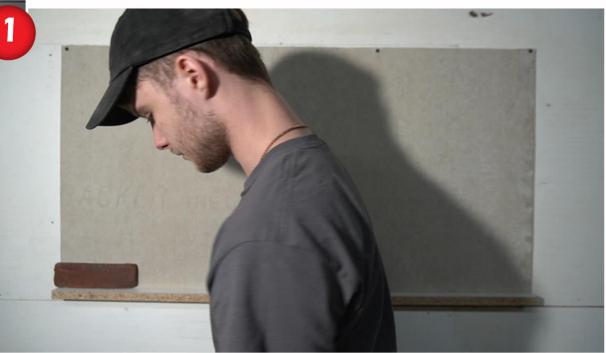

If the floor isn't level, draw a level line and start from there. Then cut some bricks down to the appropriate size to fit on the floor



Construction adhesive works great indoors and outdoors!




I'm using 100% silicon to adhere the bricks to the wall because I am working indoors




Another option is using thin Set **Mortar Mix applied** to a wall with a square notch trowel. This can be used indoors & outdoors



Use spacers to get the right distance between each bricks made mine 0.5 inches out of melamine. (I don't recommend making them any thicker though) Cut bricks to fit onto inward corners

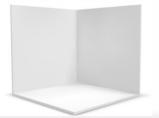



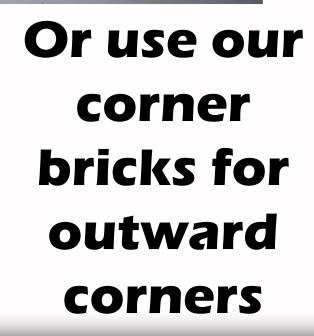






Keep applying the bricks


--

Solution of the second seco

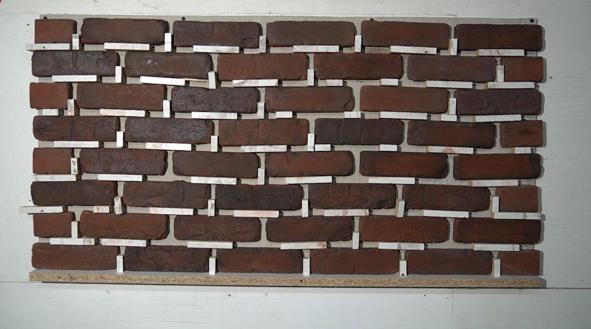



Use a grout bag to lay grout between each brick once the adhesive has dried

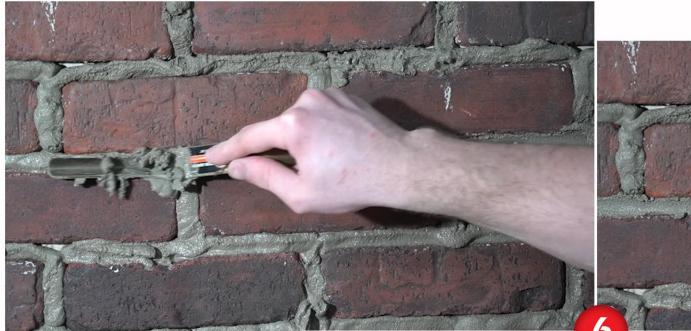

Once nothing is left on your finger after you touch the mortar, you are ready to texture it



Either scrape the mortar off with a trowel, or use a brick jointer like me

Use a large brush to smooth out the sharp edges

PBD TDP Use a washer light above the bricks and add character to your wall with shadows and lighting 8

Wait for the mortar to cure, and you're finished!!

Watch the full video here

